



## ***ADJUSTING MULTI-SIZE GAUGES***




Remove end loop from gauge.



Using the supplied T-handle, place on the end of the threaded rod and turn to open the frame.



Remove unwanted plate sizes.

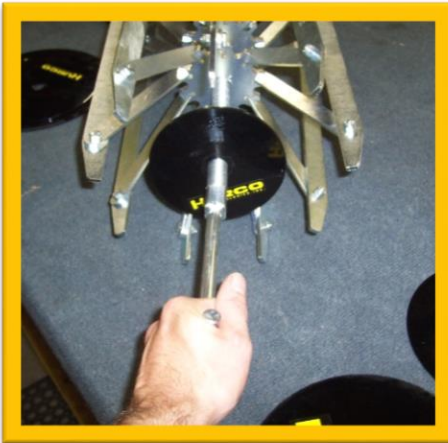

Place correct end plate set on either side of the frame and use T-handle to turn threaded rod until all skids are snug against the end plates.



Replace end loops on either side and tighten. Do not over tighten, or it may cause end plates to spiral. Gauge is now ready for deflection testing.



The frame is the carrying case  
- Store all end plates on the frame when finished testing to eliminate missing plates.